## ULTRA-RUGGED

## Quick Start Guide Get your Field PC up and running!



On both sides, slide latches up to open battery compartment door.



Close battery compartment with one hand while sliding both latches down firmly with the other hand.

🐈 Settings	ⓑ # ◀€ 12:46 💿
Power	
Same battery, use last values	Charge Percentage
Charge unknown     Enter percentage and capacity	Battery Capacity 4000
In-Vehicle Charge Mode	
Battery Advanced Processor Cha	rge Settings

Select (Enter percentage and capacity) and set charge percentage to 10.



Place battery pack in the compartment and slide right.



Plug battery charger into wall outlet, then into the Field PC. Follow on-screen instructions.







## The anatomy of your Field PC

Deutsch

Español

Svenska

Polski

- 1 Stylus
- 2 USB Client
- 3 USB Host
- 4 9-pin serial port
- 5 12V DC jack
- 6 Top lanyard cleats
- English
- ・简体中文
- •繁體中文
- Français

- 7 Touchscreen/Display
- 8 Power button
- 9 Expansion card door
- 10 Battery door
- **11** Battery door latches
- **12** Bottom lanyard cleats



part# 20028\_01