



1 Install screen protector.



2 Loosen quarter turn latches to open battery compartment door.




3 Place battery pack into the compartment.



4 Close battery compartment. Replace door, tighten latches.



5 Plug charger into Mesa. Follow on-screen instructions.

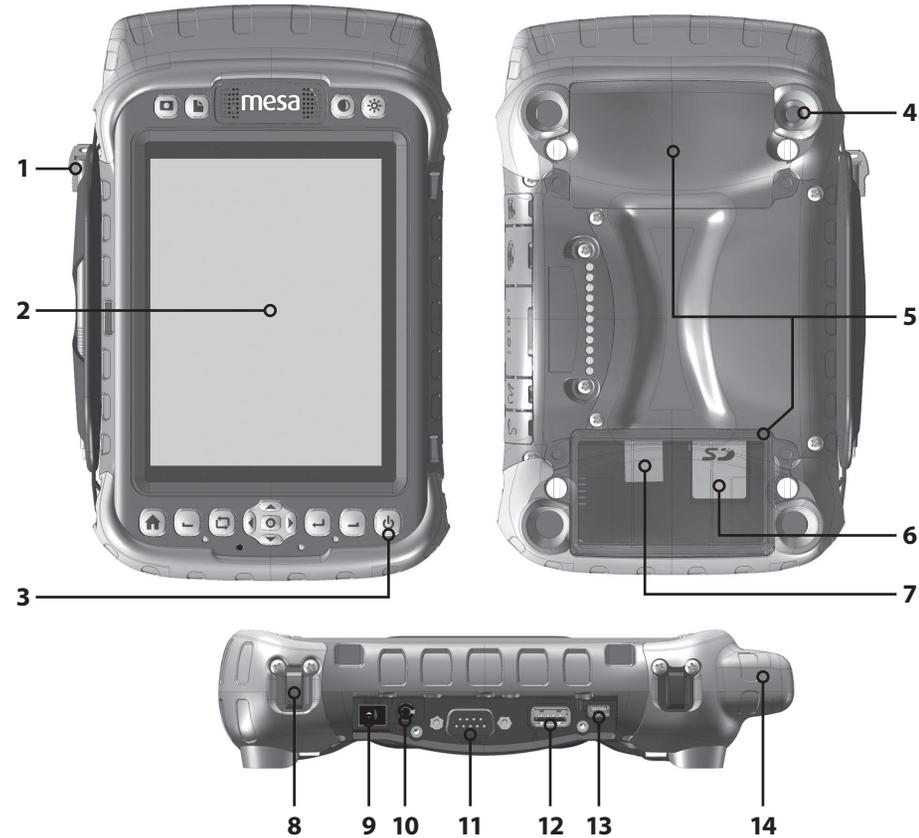

The anatomy of your Mesa Rugged Notepad

- | | |
|------------------------|-------------------------------|
| 1 Stylus and Handstrap | 8 Handstrap Tethers |
| 2 Touch Screen | 9 12V DC Jack |
| 3 Power Button | 10 Mic/Speaker Jack |
| 4 Camera Lens | 11 9-pin Serial Port |
| 5 Battery Doors | 12 USB Host |
| 6 SD Card Slot | 13 USB Client |
| 7 SIM Card Slot | 14 Antenna Bumper (Geo Model) |




EN, ES, FR, DE, PT

www.junipersys.com/Juniper-Systems-Rugged-Handheld-Computers/support/Documentation/Mesa-Rugged-Notepad

Installing and Removing Mesa from Mobile Dock



- 1** Place Mesa in Mobile Dock. Align with lower mounting points.

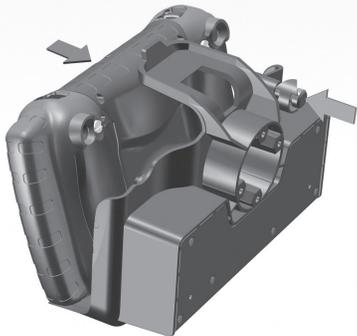


- 2** Press back to secure to Mobile Dock. Top latch will snap into place. Tighten security knob when used in vehicle.




- 3** To release, loosen security knob and lift up on top latch. Pull Mesa forward and remove.

Mounting Options

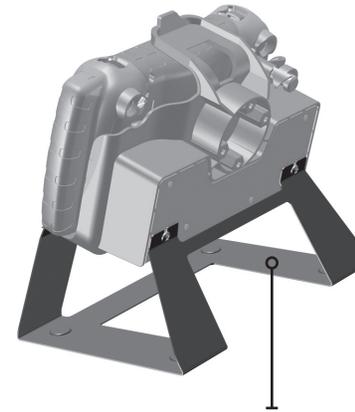


Mobile Dock Desktop Base Kit:
PN 22885

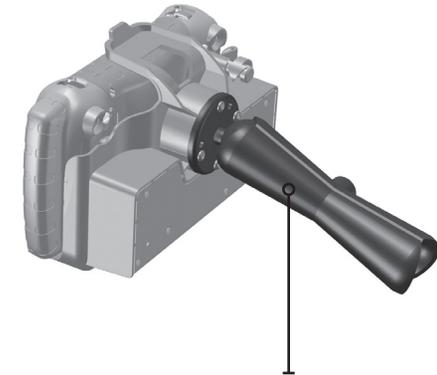

Mobile Dock Vehicle Kit:
PN 22886

The Anatomy of Your Mobile Dock

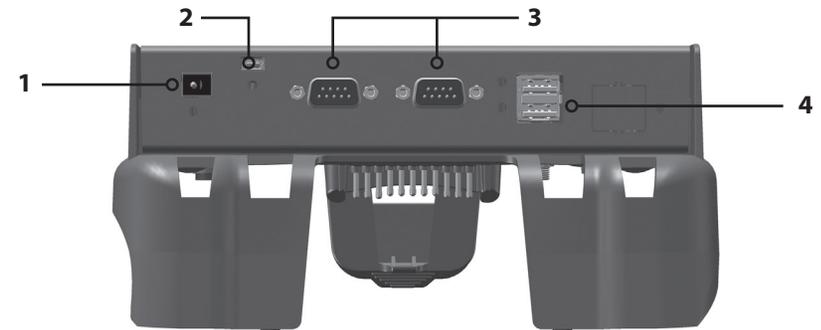

- 1** 12V DC Jack
- 2** USB Client

- 3** 9-pin Serial Ports
- 4** USB Host



EN, ES, FR, DE, PT

www.junipersys.com/Juniper-Systems-Rugged-Handheld-Computers/support/Documentation/Mesa-Rugged-Notepad